




Instruction Manual

LKB UltraPure Automatic or Manual Butterfly Valve

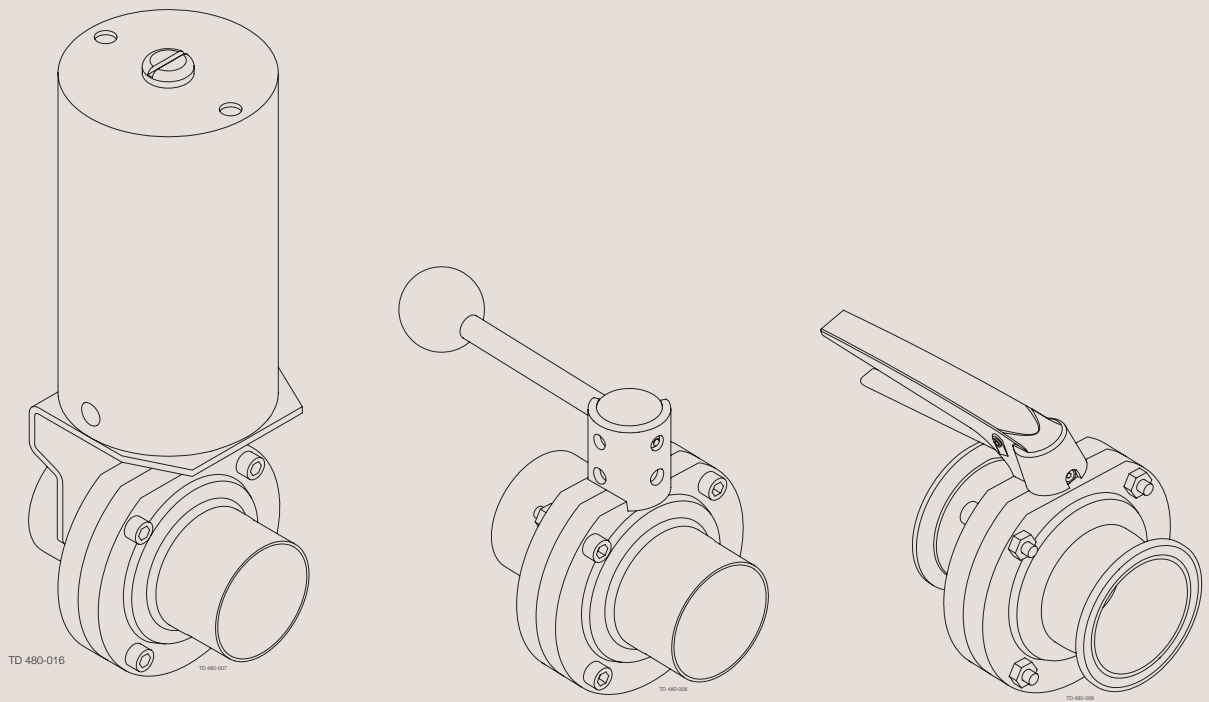

ESE01699-EN1 2011-06

Original manual

The information herein is correct at the time of issue but may be subject to change without prior notice

1. EC Declaration of Conformity	4
2. Safety	5
2.1. Important information	5
2.2. Warning signs	5
2.3. Safety precautions	6
3. Installation	7
3.1. Unpacking/delivery	7
3.2. General installation	9
3.3. Welding	11
3.4. Fitting actuator/bracket/handle on the valve (optional extras)	12
3.5. Recycling information	14
4. Operation	15
4.1. Operation	15
4.2. Troubleshooting	17
4.3. Recommended cleaning	18
5. Maintenance	19
5.1. General maintenance	19
5.2. Dismantling of valve	22
5.3. Assembly of valve	23
5.4. Dismantling of actuator	25
5.5. Assembly of actuator	26
6. Technical data	27
6.1. Technical data	27
7. Parts list and Service Kits	29
7.1. Drawing	29
7.2. LKB UltraPure Butterfly Valve, ISO	30
7.3. LKB UltraPure Butterfly Valve, ASME	32
7.4. LKB UltraPure Butterfly Valve, DIN	34
7.5. LKB Lockable Multiposition Handle for Valve	36
7.6. LKB Handle 1.1 for Butterfly Valve	38
7.7. Handle 1.1 for Indication Unit	40
7.8. LKLA Actuator Air/Spring (NC-NO) ø85	42
7.9. LKLA Actuator Air/Air ø85	44
7.10. LKLA Actuator Air/Spring (NC-NO) ø133	46
7.11. LKLA Actuator Air/Air ø133	48
7.12. LKLA-T Actuator Air/Spring (NC-NO) ø85	50
7.13. LKLA-T Actuator Air/Air ø85	52
7.14. LKLA-T Actuator Air/Spring (NC-NO) ø133	54
7.15. LKLA-T Actuator Air/Air ø133	56

1 EC Declaration of Conformity

The designating company

Alfa Laval

Company Name

Albuen 31, DK-6000 Kolding, Denmark

Address

+45 79 32 22 00

Phone No.

hereby declare that

LKB UltraPure

Denomination

Butterfly Valve

Type

Year

is in conformity with the following directives:

- Machinery Directive 2006/42/EC

Manager, Product Centre, Fluid Handling

Title

Bjarne Søndergaard

Name

Alfa Laval Kolding

Company



Signature

Designation



*Unsafe practices and other important information are emphasized in this manual.
Warnings are emphasized by means of special signs.*

2.1 Important information

Always read the manual before using the valve!

WARNING

Indicates that special procedures must be followed to avoid serious personal injury.

CAUTION

Indicates that special procedures must be followed to avoid damage to the valve.

NOTE

Indicates important information to simplify or clarify procedures.

2.2 Warning signs

General warning:



Caustic agents:



2 Safety

All warnings in the manual are summarized on this page.

"Mushrooms" = Fastening connections on the end cap.

Pay special attention to the instructions below so that severe personal injury and/or damage to the valve are avoided.

2.3 Safety precautions

Installation

Always read the technical data thoroughly (See chapter 5 Maintenance).

Always release compressed air after use.

Never touch the coupling between the valve body and the actuator if compressed air is supplied to the actuator.



Operation

Always read the technical data thoroughly (See chapter 5 Maintenance).

Never touch the valve or the pipelines when processing hot liquids or when sterilizing.

Never touch the coupling between the valve body and the actuator if compressed air is supplied to the actuator.



Always handle lye and acid with great care.



Maintenance

Always observe the technical data thoroughly (See chapter 5 Maintenance).

Always release compressed air after use.

Never service the valve when it is hot.

The valve/actuator and the pipelines must **never** be pressurised when servicing the valve/actuator.

Never stick your fingers through the valve ports if the actuator is supplied with compressed air.

Never touch the coupling between the valve body and the actuator if compressed air is supplied to the actuator.

The actuator springs are not caged (ø85 mm, NC/NO).

Never use compressed air for removing the end caps of the actuator.

Always fit the end cap with the "mushrooms" turned outwards and position it correctly before supplying compressed air to the actuator.



Transportation

Always secure that compressed air is released .

Always secure that all connections is disconnected before attempt to remove the valve from the installation.

Always drain liquid out of valves before transportation.

Always used predesigned lifting points if defined.

Always secure sufficient fixing of the valve during transportation - if special designed packaging material is available it must be used.

The instruction manual is part of the delivery. Study the instructions carefully.
 The items refer to parts list and service kits section.
 The valve is preassembled before delivery.

3.1 Unpacking/delivery

Step 1

CAUTION

Alfa Laval cannot be held responsible for incorrect unpacking.

Check the delivery:


1. Complete valve (see Step 2).
2. Complete actuator, if supplied (see Step 3).
3. Bracket for actuator, if supplied (see Step 3).
4. Complete handle, if supplied.
5. Delivery note.
6. Instruction manual.

Step 2

Standard delivery of valve parts:

1. Two valve body halves (1).
2. Valve disc (2) fitted in seal ring (5).
3. Two bushes (3, 4) fitted on the disc stem.
4. A set of screws and nuts (6).

Separate parts for welding

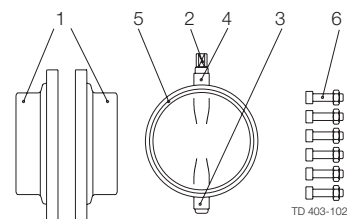

Step 3


Delivery of actuator and bracket:

1. Complete actuator with coupling and activating ring (ø85 mm) or indication pin (ø133 mm).
2. Bracket with screws for the actuator.

LKLA -
ø85mm


Bracket
with screws

LKLA - ø133mm

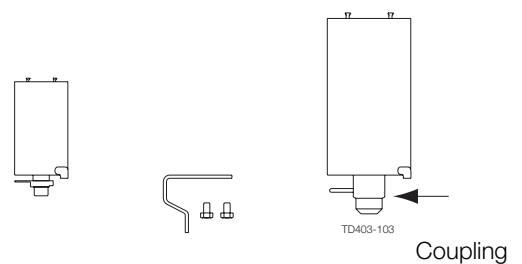

Step 4

1. Clean the valve/valve parts for possible packing materials.
2. Clean the handle or the actuator, if supplied.

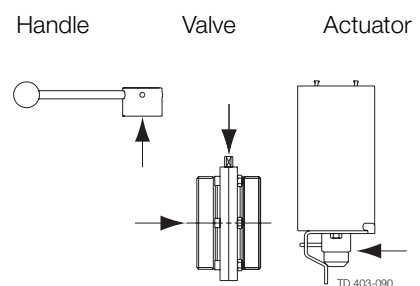

Remove packing materials!

3 Installation


*The instruction manual is part of the delivery. Study the instructions carefully.
The items refer to parts list and service kits section.
The valve is preassembled before delivery.*

Step 5 Inspection!

1. Inspect the valve/valve parts for visible transport damage.
2. Inspect the handle or the actuator, if supplied.

Caution!

Avoid damaging the valve/valve parts.
Avoid damaging the handle or the actuator, if supplied.

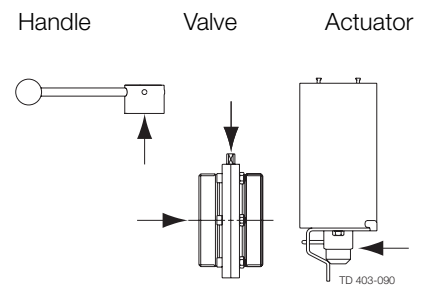

Study the instructions carefully. The valve has welding ends as standard but can also be supplied with fittings.

NC = Normally closed.

NO = Normally open.

A/A = Air/air activated.

3.2 General installation

Step 1



Always read the technical data thoroughly.



Always release compressed air after use.

Never touch the coupling between the valve body and the actuator if compressed air is supplied to the actuator.

CAUTION

Alfa Laval cannot be held responsible for incorrect installation.


Step 2

Avoid stressing the valve.

Pay special attention to:

- Vibrations.
- Thermal expansion of the tubes.
- Excessive welding.
- Overloading of the pipelines.

Risk of damage!

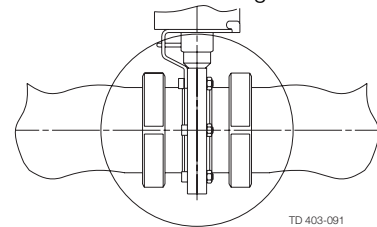


Step 3

Fittings:

Ensure that the connections are tight.


Remember seal rings!

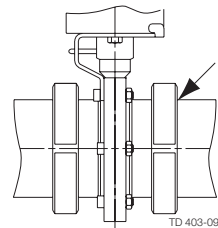

Step 4

Position of actuator:

Position the water rejector on the actuator correctly. (The actuator can be installed in any position).

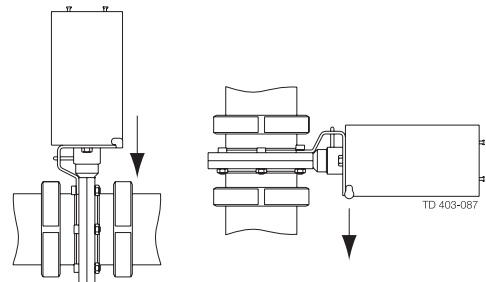

Turn the ventilation opening downwards!

3 Installation

Study the instructions carefully. The valve has welding ends as standard but can also be supplied with fittings.

NC = Normally closed.


NO = Normally open.

A/A = Air/air activated.

Air connection of actuator:

Connect compressed air correctly.

Pay special attention to the warnings!

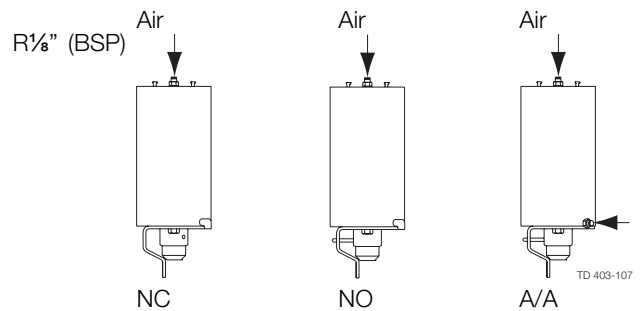

Pre-use check:

Open and close the valve several times to ensure that the valve disc moves smoothly against the sealing.

Pay special attention to the warnings!

Study the instructions carefully.

The valve is supplied as separate parts to facilitate the welding.

LKB UltraPure: for ISO, DIN and ASME tubes

3.3 Welding

Step 1


1. Weld the valve body halves into the pipelines.
2. Maintain the minimum clearance (A) so that the actuator can be removed.
3. If welding both valve body halves, ensure that they can be moved axially **B1 mm**, so that the valve parts can be removed.
4. After welding assemble the valve in accordance with the steps 1-5 in section 5.3 Assembly of valve.

Pre-use check

Open and close the valve several times to ensure that the valve disc moves smoothly against the seal ring.

Pay special attention to the warnings!

Size	A (mm)				B ₁ (mm)
	Ø85		Ø133		
	LKLA	LKLA-T	LKLA	LKLA-T	
25 mm/1"	245				20
38 mm/1½"	245				20
51 mm/2"	255				20
63.5 mm/2½"	265				24
76.1 mm/3"	265				24
101.6 mm/4"	290	+ 172	420	+ 172	37
DN25	245	(incl. top unit)		(incl. top unit)	20
DN32	245				20
DN40	250				20
DN50	260				20
DN65	270				24
DN80	275				23
DN100	290		420		37

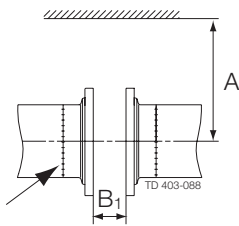

Caution!

3 Installation

Study the instructions carefully and pay special attention to the warnings!

NC = Normally closed.

NO = Normally open.


A/A = Air/air activated.

3.4 Fitting actuator/bracket/handle on the valve (optional extras)

Step 1

Bracket/indication:


1. Fit the bracket as shown.
2. Fit and tighten the screws.
3. Fit the activating ring/indication pin as shown.

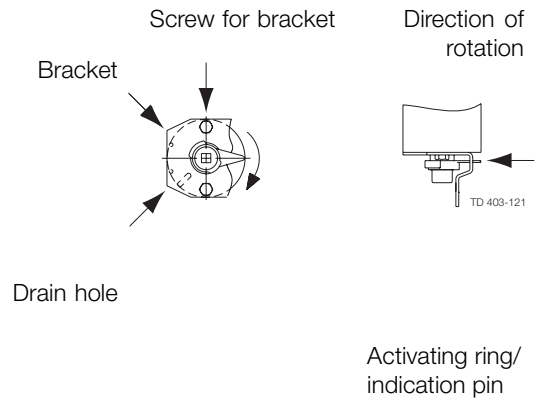

Step 2

Actuator/bracket - NC:


1. Ensure that the valve is closed by checking the position of the groove of the disc stem top.
2. Fit the actuator/bracket in accordance with Step 4 section 5.3 Assembly of valve.

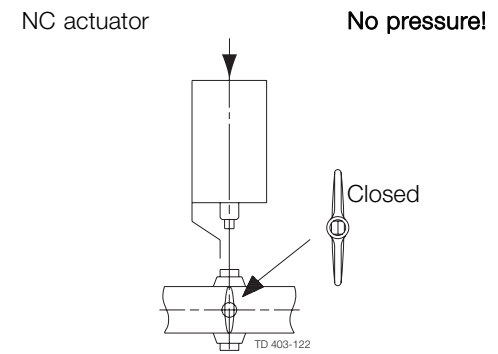

Step 3

Actuator/bracket - NO:


1. Ensure that the valve is open by checking the position of the groove of the disc stem top.
2. Fit the actuator/bracket in accordance with Step 4 section 5.3 Assembly of valve.

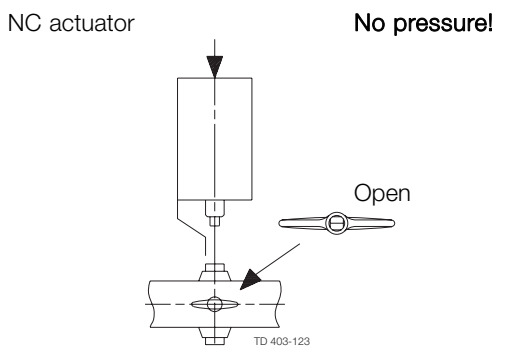

Step 4

Actuator/bracket - A/A:

1. Ensure that the valve is open by checking the position of the groove of the disc stem top.
2. Supply compressed air to the actuator.
3. Fit the actuator/bracket in accordance with Step 4 section 5.3 Assembly of valve

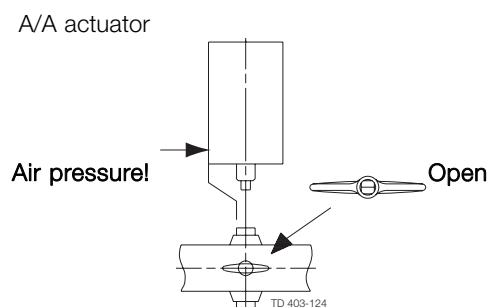

Study the instructions carefully and pay special attention to the warnings!

NC = Normally closed.

NO = Normally open.

A/A = Air/air activated.

Step 5


Handle/indication:

1. Fit the standard handle on the valve so that the screw can enter the hole in the disc connection.
2. Fit the handle with position indication as shown and in accordance with the Step 3-Step 4, section 5.3 Assembly of valve.

Pre-use check:

Open and close the valve several times to ensure that it operates smoothly.

Pay special attention to the warnings!

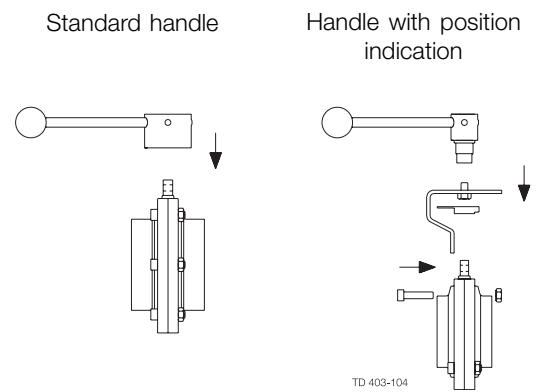

3 Installation

Study the instructions carefully and pay special attention to the warnings!

NC = Normally closed.

NO = Normally open.

A/A = Air/air activated.

3.5 Recycling information

- **Unpacking**

- Packing material consists of wood, plastics, cardboard boxes and in some cases metal straps
- Wood and cardboard boxes can be reused, recycled or used for energy recovery
- Plastics should be recycled or burnt at a licensed waste incineration plant
- Metal straps should be sent for material recycling

- **Maintenance**

- During maintenance oil and wear parts in the machine are replaced
- All metal parts should be sent for material recycling
- Worn out or defective electronic parts should be sent to a licensed handler for material recycling
- Oil and all non metal wear parts must be taken care of in agreement with local regulations

- **Scrapping**

- At end of use, the equipment shall be recycled according to relevant, local regulations. Beside the equipment itself, any hazardous residues from the process liquid must be considered and dealt with in a proper manner. When in doubt, or in the absence of local regulations, please contact the local Alfa Laval sales company
-

Study the instructions carefully and pay special attention to the warnings!
The valve is automatically or manually operated by means of an actuator or a handle.

4.1 Operation

Step 1



Always read the technical data thoroughly.

CAUTION


Alfa Laval cannot be held responsible for incorrect operation.

Step 2



Never touch the valve or the pipelines when processing hot liquids or when sterilizing.

Burning danger

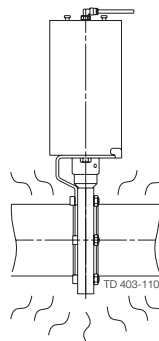


Step 3



Never touch the coupling between the valve body and the actuator if compressed air is supplied to the actuator.

Air

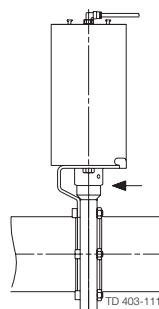


Rotating parts

Step 4

Operation by means of actuator:

Automatic on/off operation by means of compressed air.

Air

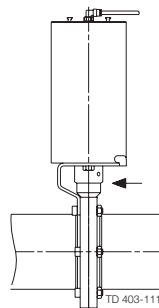

Rotating parts


Step 5

Operation by means of standard handle:

1. Manual on/off operation.
2. Pull the handle outwards while rotating it.

NOTE!

This also applies for the Lockable Multiposition Handle.

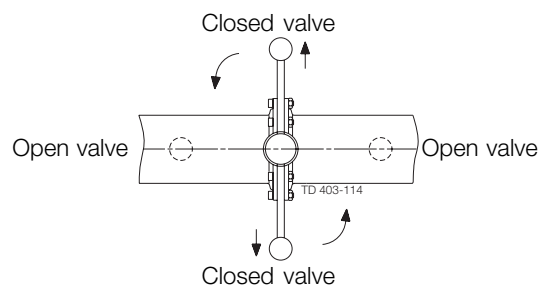

4 Operation


Study the instructions carefully and pay special attention to the warnings!

The valve is automatically or manually operated by means of an actuator or a handle.

Step 6

Operation by means of regulating handle:

1. Manual flow regulation because of infinite locking positions.
2. Loosen the handle, rotate it and tighten again.

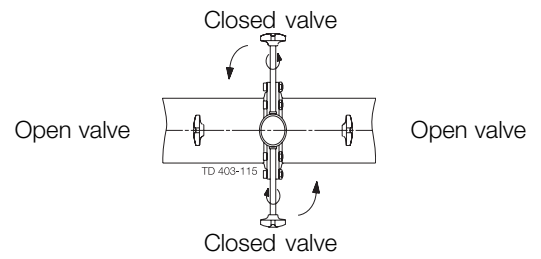

Pay attention to possible break-down. Study the instructions carefully.
 NC = Normally closed. NO = Normally open. A/A = Air/air activated.

4.2 Troubleshooting

Step 1

NOTE!

Study the maintenance instructions carefully before replacing worn parts. - See 5.1 General maintenance

Problem	Cause/result	Repair
<ul style="list-style-type: none"> - External leakage - Internal leakage by closed valve (normal wear) 	<ul style="list-style-type: none"> - Worn seal ring - Worn flange seal ring (LKB-F) 	Replace the seal ring and the bushes
<ul style="list-style-type: none"> - External leakage - Internal leakage by closed valve (too early) 	<ul style="list-style-type: none"> - High pressure - High temperature - Aggressive liquids - Many activations 	<ul style="list-style-type: none"> - Change rubber grade - Change the operation conditions
<ul style="list-style-type: none"> - Difficult to open/close - Damage of disc connection (high torque) 	Incorrect seal ring (swelling)	Replace by a seal ring of a different rubber grade
Difficult to open/close	<ul style="list-style-type: none"> - 90° displacement of the actuator - Incorrect actuator function (NC,NO) - Worn actuator bearings - Dirt penetration into the actuator 	<ul style="list-style-type: none"> - Fit correctly (see 3.4 Fitting actuator/bracket/handle on the valve (optional extras)) - Change from NC to NO or vice versa - Replace the bearings - Service the actuator

4 Operation

The valve is designed for cleaning in place (CIP). CIP = Cleaning In Place.
 Study the instructions carefully and pay special attention to the warnings!
 NaOH = Caustic Soda.
 HNO₃ = Nitric acid.

4.3 Recommended cleaning

Step 1



Always handle lye and acid with great care.

Caustic danger!



Always use rubber gloves!




Always use protective goggles!


Step 2



Never touch the valve or the pipelines when sterilizing.

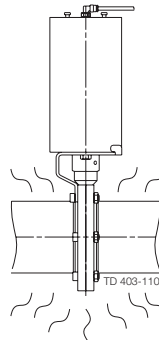

Burning danger!



Step 3

Examples of cleaning agents:

Use clean water, free from chlorides.

1. 1% by weight NaOH at 70° C (158° F)

1 kg (2.2 lbs) NaOH	+	100 l (26.4 gal) water	=	Cleaning agent.
------------------------	---	------------------------------	---	-----------------

2.2 l (0.6 gal) 33% NaOH	+	100 l (26.4 gal) water	=	Cleaning agent.
-----------------------------	---	------------------------------	---	-----------------

2. 0.5% by weight HNO₃ at 70° C (158° F)

0.7 l (0.2 gal) 53% HNO ₃	+	100 l (26.4 gal) water	=	Cleaning agent.
---	---	------------------------------	---	-----------------

Step 4

- Avoid excessive concentration of the cleaning agent.
 - Dose gradually.
- Adjust the cleaning flow to the process.
 - Sterilization of milk/viscous liquids.
 - Increase the cleaning flow.
- Always** rinse well with clean water after the cleaning.

Always rinse!



Clean water Cleaning agents

Step 5

NOTE

The cleaning agents must be stored/disposed of in accordance with current regulations/directives.

Maintain the valve and the regulator carefully.
 Study the instructions carefully and pay special attention to the warnings!
 Always keep spare seal rings, rubber seals, bushes and actuator bearings in stock.
 "Mushrooms" = Fastening connections on the end cap.

5.1 General maintenance

Step 1



Always read the technical data thoroughly.
 See chapter 6 Technical data



Always release compressed air after use.

NOTE

All scrap must be stored/discharged in accordance with current rules/directives.


Step 2



Never service the valve when it is hot.




Never service the valve with valve and pipelines under pressure.
 The valve/actuator and the pipelines must **never** be pressurised when servicing the valve/actuator.

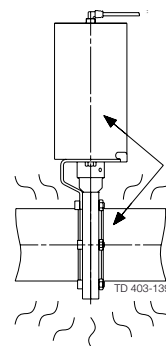

Atmospheric pressure required!


Burning danger!



Step 3




Never stick your fingers through the valve ports if the actuator is supplied with compressed air.



Air

Air


Cutting danger!



Step 4



Never touch the coupling between the valve body and the actuator if compressed air is supplied to the actuator.



Air

Rotating parts

5 Maintenance

Maintain the valve and the regulator carefully.

Study the instructions carefully and pay special attention to the warnings!


Always keep spare seal rings, rubber seals, bushes and actuator bearings in stock.

"Mushrooms" = Fastening connections on the end cap.

Step 5



Actuator size $\varnothing 85$ mm (NC/NO):
The actuator springs are **not** caged.



Springs
Caution!

TD 403-118

Step 6




End cap of actuator:

- **Never** remove the end cap by using compressed air.
- **Always** fit the end cap with the "mushrooms" turned outwards and position it correctly before supplying compressed air to the actuator.

Caution!

End cap "Mushrooms"



TD 403-113

Maintain the valve and the regulator carefully.

Study the instructions carefully and pay special attention to the warnings!

Always keep spare seal rings, rubber seals, bushes and actuator bearings in stock.

"Mushrooms" = Fastening connections on the end cap.

Recommended spare parts: Service kits (see 7 Parts list and Service Kits).

Order service kits from the service kits list (see 7 Parts list and Service Kits)

Ordering spare parts

Contact the Sales Department.

	Valve seal rings	Valve bushes	Actuator rubber seals	Actuator bearings
Preventive maintenance	Replace after 12 months	Replace when replacing the valve seal rings	Replace after 24 months	
Maintenance after leakage (leakage normally starts slowly)	Replace by the end of the day	Replace when replacing the valve seal rings	Replace when possible	
Planned maintenance	<ul style="list-style-type: none"> - Regular inspection for leakage and smooth operation - Keep a record of the valve - Use the statistics for planning of inspections <p>Replace after leakage</p>	Replace when replacing the valve seal rings	<ul style="list-style-type: none"> - Regular inspection for leakage and smooth operation - Keep a record of the actuator - Use the statistics for planning of inspections <p>Replace after air leakage</p>	Replace when they become worn
Lubrication	<p>Before fitting (use USDA-H1 approved)</p> <ul style="list-style-type: none"> - Unisilcon L641(*) - Paraliq(*) GTE 703 - Molycote 111(D) 	None	<p>Before fitting</p> <ul style="list-style-type: none"> - Molycote Long term 2 Plus (Δ) - Molycote 1132(Δ) (for aggressive environment) 	<p>When replacing actuator rubber seals</p> <ul style="list-style-type: none"> - Molycote Long term 2 Plus (Δ) - Molycote 1132 (Δ) (for aggressive environment)

5 Maintenance

Study the instructions carefully. The items refer to the parts list and service kits section.

Handle scrap correctly.


LKB UltraPure: For ISO, DIN and ASME tubes.

5.2 Dismantling of valve

Step 1

Valve with actuator:


1. Remove screws and nuts (6).
2. Remove the bracket with the actuator.

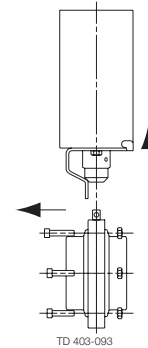

Step 2


Valve with handle:

1. Remove the complete handle.
2. Remove screws and nuts (6).

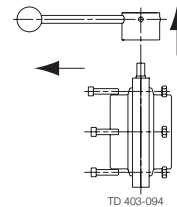


Step 3

Remove seal ring (5) together with valve disc (2).

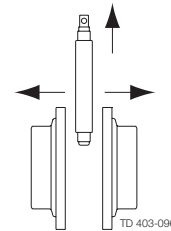

Step 4

Remove bushes (3, 4) from the disc stems.




Step 5

Remove valve disc (2) from seal ring (5).

NOTE!

For the valve sizes 25-38 mm and DN25-40 it is recommended to remove the valve disc by using a special service tool.

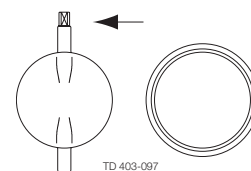

Study the instructions carefully. The items refer to the parts list and service kits section.
 LKB UltraPure: For ISO, DIN and ASME tubes.
 Lubricate the seal ring before fitting it.
 Lubricate the disc stem before fitting the bushes.


5.3 Assembly of valve

Step 1

1. Lubricate the pin holes in seal ring (5), (important for Silicone and Viton).
2. Fit valve disc (2) in the seal ring (5).

NOTE!

For the valve sizes 25-38 mm and DN25-40 it is recommended to fit the valve disc by using a special service tool.

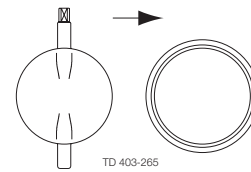


Step 2

1. Fit bushes (3,4) on the disc stem.
2. Fit seal ring (5) together with valve disc (2) between the two valve body halves (1).

CAUTION!

Rotate the valve disc so that the valve is open before tightening screws and nuts (6).

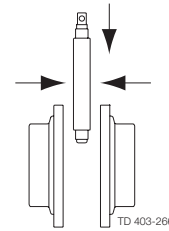


Step 3

Valve with handle:

1. Fit screws and nuts (6) and torque tighten in accordance with the requirements (see Step 5).
2. Fit the complete handle on the disc connection and tighten the screw on the handle.

NOTE!


This also applies for the Lockable Multiposition Handle.

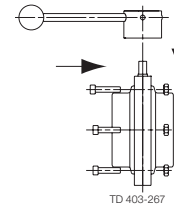

Step 4

Valve with actuator:

1. Fit the actuator with the bracket so that the disc connection enters the coupling (see 3.4 Fitting actuator/bracket/handle on the valve (optional extras)).
2. Fit screws and nuts (6) and torque tighten in accordance with the requirements so that the bracket is fixed to the valve (see Step 5).

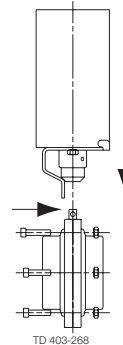

Fit correctly!

See 3.4 Fitting actuator/bracket/handle on the valve (optional extras)

5 Maintenance

Study the instructions carefully. The items refer to the parts list and service kits section.

LKB UltraPure: For ISO, DIN and ASME tubes.

Lubricate the seal ring before fitting it.

Lubricate the disc stem before fitting the bushes.

Step 5

Pre-use check:

Check that the valve disc moves smoothly against the seal ring.

Pay special attention to the warnings!

Tools/torque values for assembly of the valve body halves:


Valve size	1" 25 mm DN 25	DN32	1½" 38 mm DN40	2" 51 mm DN50	2½" 63.5 mm DN65	3" 76 mm DN80	4" 101.6 mm DN100
Allen Key	5 mm (0.2")	5 mm (0.2")	5 mm (0.2")	6 mm (0.24")	6 mm (0.24")	6 mm (0.24")	8 mm (0.3")
Recomm. Torque	18 Nm (13 lbf-ft)	18 Nm (13 lbf-ft)	18 Nm (13 lbf-ft)	20 Nm (15 lbf-ft)	20 Nm (15 lbf-ft)	20 Nm (15 lbf-ft)	38 Nm (38 lbf-ft)

Study the instructions carefully. The items refer to the parts list and service kits section.
 Handle scrap correctly.
 NC = Normally closed. NO = Normally open. A/A = Air/air activated.

5.4 Dismantling of actuator

Step 1

1. Press end cap (5) into air cylinder (1).
2. Remove retaining ring (6).

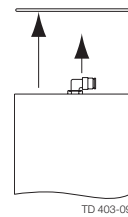


Use a press!

Step 2

NC/NO actuator:

Release the pressure on end cap (5) carefully and remove the end cap.

Pay special attention to the warning!

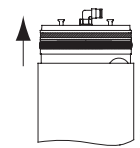


Step 3

A/A actuator:

Remove end cap (5) by hand.

Pay special attention to the warning!




Step 4

Remove piston (3) and the springs.


NOTE!

- The actuator size $\varnothing 133$ mm has a caged spring assembly.
- The air/air actuator has no springs.

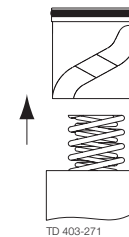


Step 5

Remove connex pin (16) and coupling (17) from rotating cylinder stem (2).

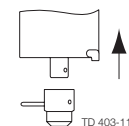

Step 6

Remove rotating cylinder (2) and the remaining internal parts from air cylinder (1).



5 Maintenance

Study the instructions carefully.

NC = Normally closed. NO = Normally open. A/A = Air/air activated.


Lubricate the rubber seals before fitting them. Lubricate the bearings.

Clean the piston before assembly.

5.5 Assembly of actuator

Step 1


Fit rotating cylinder (2) in air cylinder (1).



Step 2

Fit coupling (17) on rotating cylinder stem (2) and fit connex pin (16).

Fit the connex pin correctly!

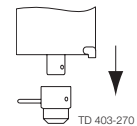

Step 3


Fit the springs in rotating cylinder (2) and fit piston (3) carefully.

CAUTION!

Fit the piston correctly in relation to the bearings.

NOTE!

The air/air actuator is has no springs.

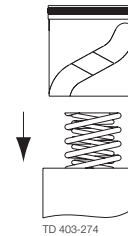


Fit correctly!

Step 4

A/A actuator:

1. Fit end cap (5) sufficiently into air cylinder (1) so that retaining ring (6) can be fitted in the air cylinder.
2. Position the end cap correctly by hand.

Pay special attention to the warning!

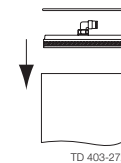


Step 5

1. Fit end cap (5) in air cylinder (1) and press sufficiently down so that retaining ring (6) can be fitted in the air cylinder.
2. Release the pressure on the end cap.

Pay special attention to the warning!

Use a press!
NC/NO actuator

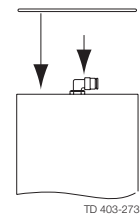

Step 6

Pre-use check:

1. Supply compressed air to the actuator.
2. Activate the actuator several times to ensure that it operates smoothly.

Pay special attention to the warnings!

*It is important to observe the technical data during installation, operation and maintenance.
Inform the personnel about the technical data.
NC = Normally closed. NO = Normally open. A/A = Air/air activated.*

6.1 Technical data

Valve - data	
Max. product pressure	1000 kPa (10 bar) (145 psi)
Min. product pressure	Full vacuum
Temperature range	-10° C to +95° C* (14°F to 203°F)
Product acc. to PED 97/23/EC	Fluids group 2
Valve - materials	
Product wetted steel parts	AISI 316L/1.4404
ASME BPE weld end	316L (low sulfur)
Other steel parts	AISI 304
Rubber grades	EPDM, Viton (FPM)
Bushes for valve disc	PVDF
Outside finish	Semi bright, RA 3.2 µm
Inside finish (wetted parts)	- ISO/DIN SF1, RA 0.5µm (ASME BPE table SF-3)
	- ASME BPE SF1, RA 0.5µm (ASME BPE table SF-3)
	SF4, RA 0.38µm (ASME BPE table SF-3)
Actuator - data	
Max. air pressure	700 kPa (7 bar) (101.5 psi)
Min. air pressure, NC or NO	400 kPa (4 bar) (58 psi)
Temperature range	-25° C to +90° C (-13°F to + 94°F)
Air consumption (litres free air)	0.24 x p (bar)
	- ø85 mm 0.95 x p (bar)
	- ø133 mm
Actuator - materials	
Actuator body	AISI 304
Piston	Light alloy, bronze for ø85 mm A/A
Seals	Nitrile (NBR)
Housing for switches	Noryl (PPO)
Finish	Semi bright

*) SIP (Steam In Place) up to +140° C (284°F) is possible with the following actions:

- Open the valves
- SIP operation


Cool down the valves before closing/operating again.

Noise

One meter away from - and 1.6 meter above the exhaust the noise level of a valve actuator will be approximately 77dB(A) without noise damper and approximately 72 dB(A) with noise damper - Measured at 7 bars air-pressure.

The drawing include all parts of the valves.


7.1 Drawing

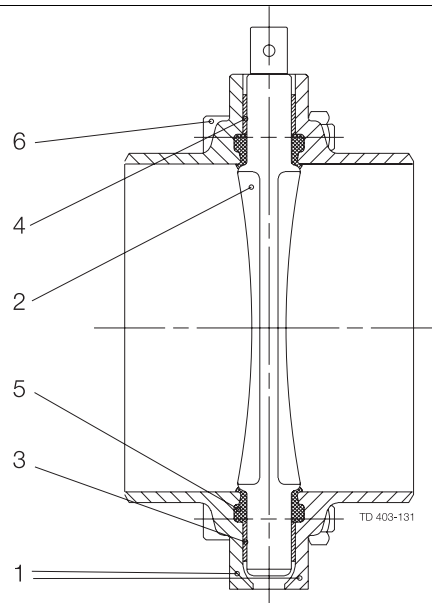

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.2 LKB UltraPure Butterfly Valve, ISO

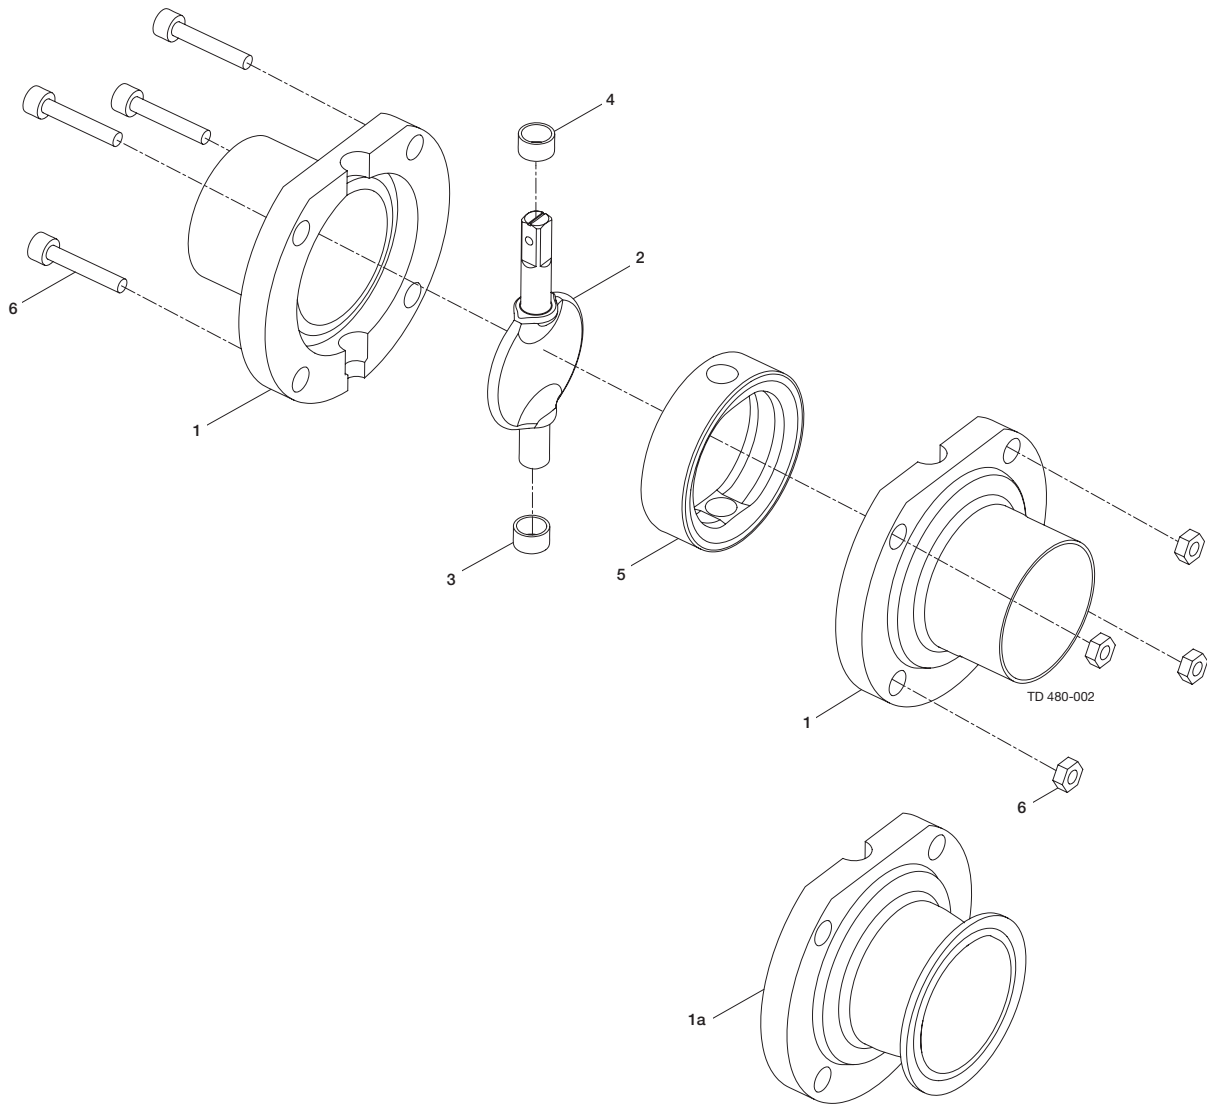

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1 ▲	1	Alfa Laval Q-doc service kit
1	2	Valve body half, welding ends
1a	2	Valve body half, clamp ferrule
2	1	Disc*
3 ▲	1	Bush
4 ▲	1	Bush
5 ▲	1	Seal ring
6	1	Set screw

Service kits

Denomination	25 mm Disc □ 8	38 mm Disc □ 8	51 mm Disc □ 8	63.5 mm Disc □ 8	76.1 mm Disc □ 10	101.6 mm Disc □ 12
--------------	-------------------	-------------------	-------------------	---------------------	----------------------	-----------------------

Service Kits

▲ Service kit EPDM	9611-92-3284	9611-92-3285	9611-92-3286	9611-92-3287	9611-92-3288	9611-92-3289
▲ Service kit FPM	9611-92-3297	9611-92-3298	9611-92-3299	9611-92-3300	9611-92-3301	9611-92-3302

Parts marked with ▲ are included in the service kit.

Recommended spare parts: Service kit.


900581

* = 3.1 Certificate in accordance to EN 10204 included.

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.3 LKB UltraPure Butterfly Valve, ASME

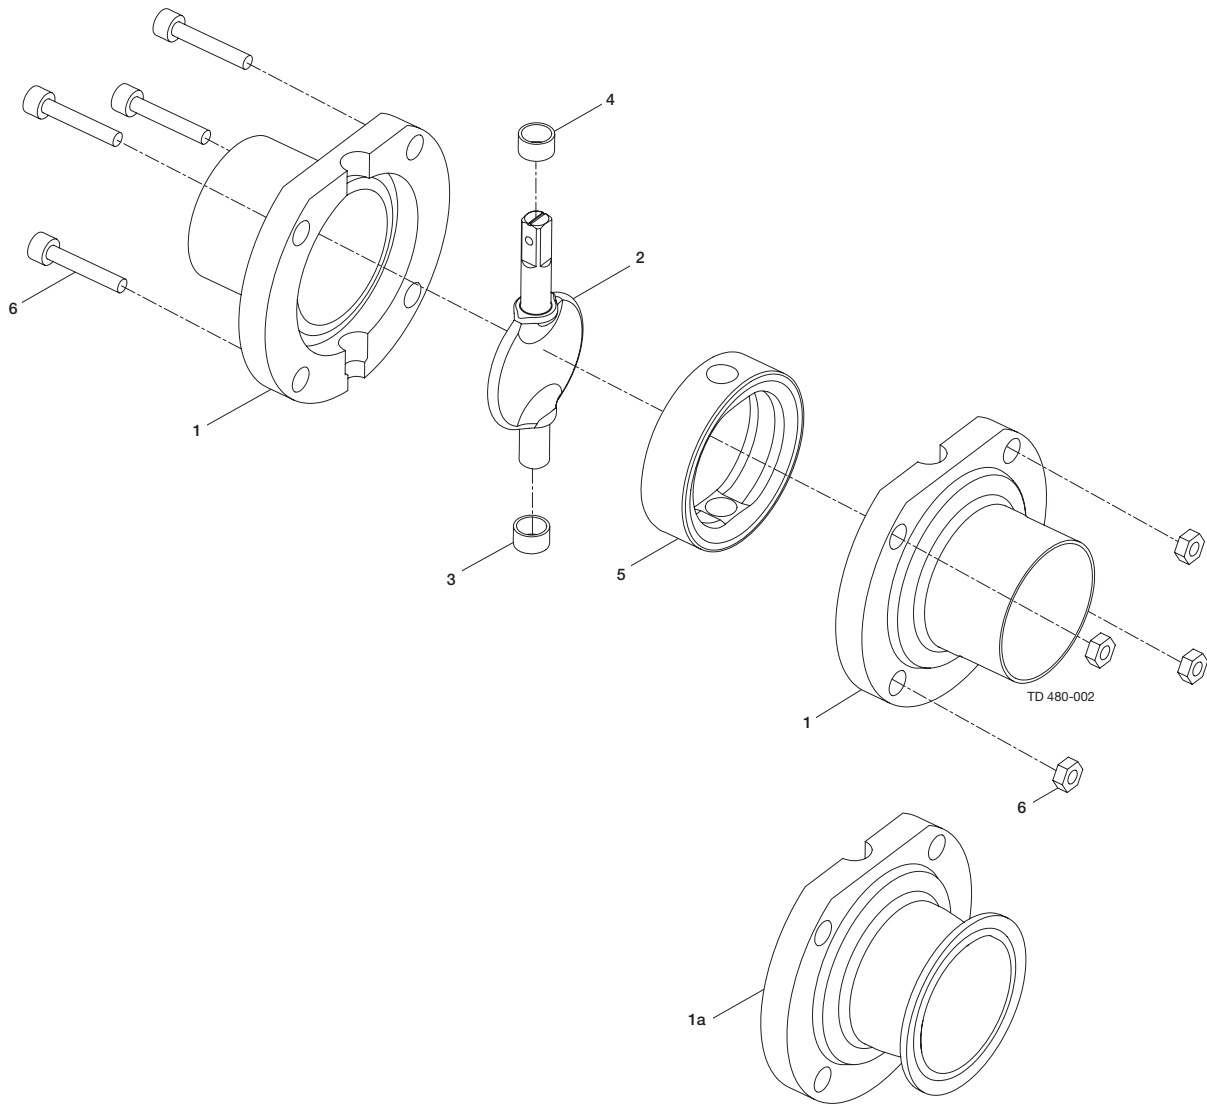

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
▲	1	Alfa Laval Q-doc service kit
1	2	Valve body half, welding ends
1a	2	Valve body half, clamp ferrule
2	1	Disc*
3	1	Bush
4	1	Bush
5	1	Seal ring
6	1	Set screw

Service kits

Denomination	25 mm Disc □ 8	38 mm Disc □ 8	51 mm Disc □ 8	63.5 mm Disc □ 8	76 mm Disc □ 10	101.6 mm Disc □ 12
--------------	-------------------	-------------------	-------------------	---------------------	--------------------	-----------------------

Service Kits RA 0.5

▲ Service kit, EPDM	9611-92-3284	9611-92-3285	9611-92-3286	9611-92-3287	9611-92-3288	9611-92-3289
▲ Service kit, FPM	9611-92-3297	9611-92-3298	9611-92-3299	9611-92-3300	9611-92-3301	9611-92-3302

Service kits

Denomination	25 mm Disc □ 8	38 mm Disc □ 8	51 mm Disc □ 8	63.5 mm Disc □ 8	76 mm Disc □ 10	101.6 mm Disc □ 12
--------------	-------------------	-------------------	-------------------	---------------------	--------------------	-----------------------

Service Kits RA 0.38

▲ Service kit, EPDM	9611-92-3284	9611-92-3285	9611-92-3286	9611-92-3287	9611-92-3288	9611-92-3289
▲ Service kit, FPM	9611-92-3297	9611-92-3298	9611-92-3299	9611-92-3300	9611-92-3301	9611-92-3302

Parts marked with ▲ are included in the service kit.

Recommended spare parts: Service kit.


900583

* = 3.1 Certificate in accordance to EN 10204 included.

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.4 LKB UltraPure Butterfly Valve, DIN

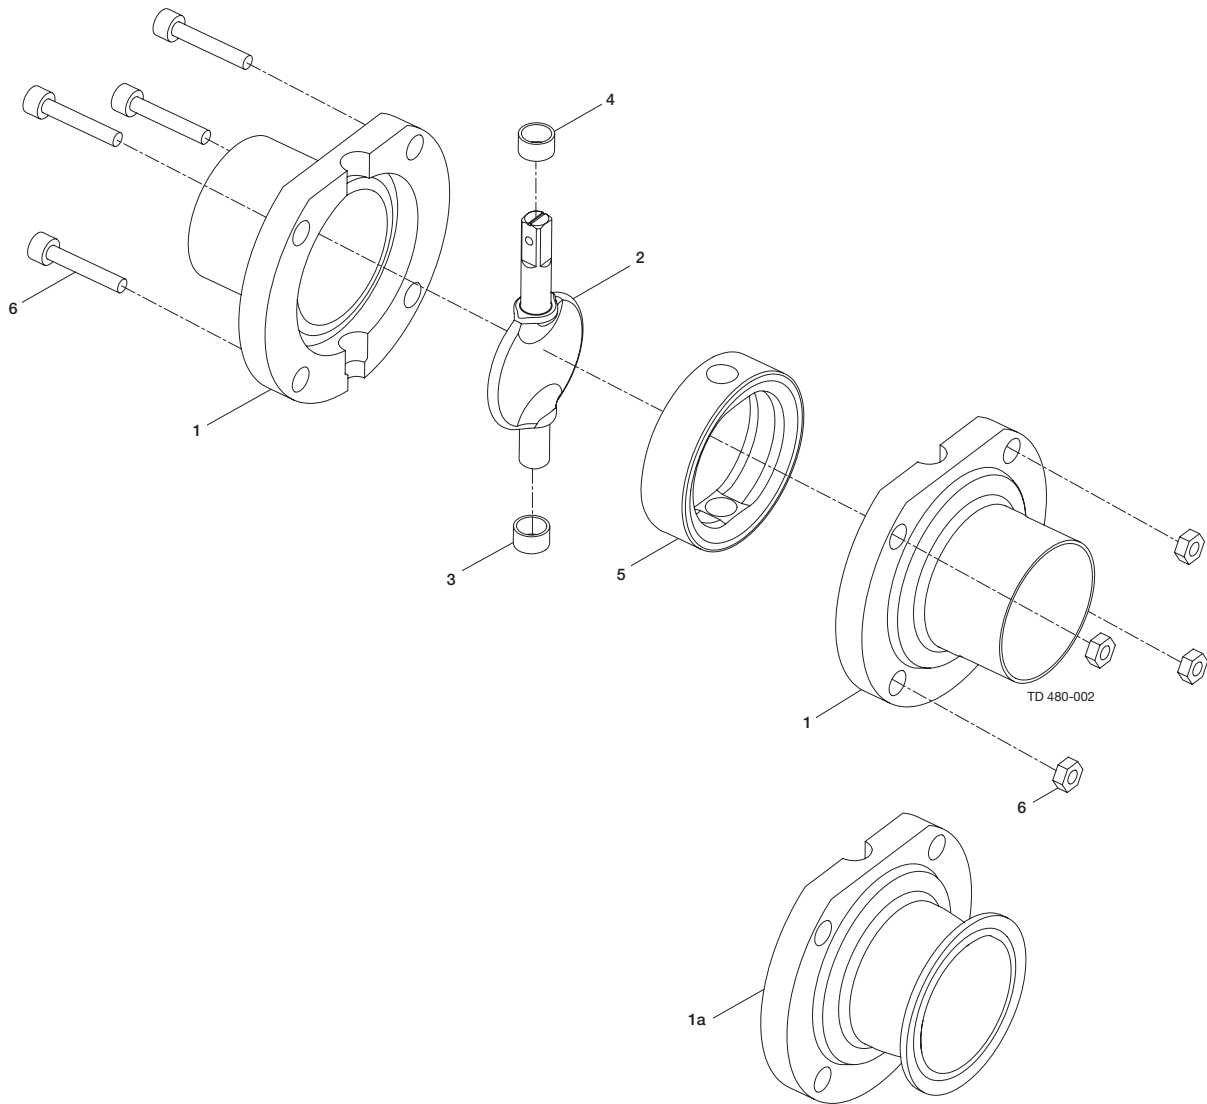

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
▲	1	Alfa Laval Q-doc service kit
1a	2	Valve body half, clamp ferrule
1	2	Valve body half, welding ends
2	1	Disc*
3	1	Bush
4	1	Bush
5	1	Seal ring
6	1	Set screw

Service kits

Denomination	DN 25 Disc □ 8	DN 32 Disc □ 8	DN 40 Disc □ 8	DN 50 Disc □ 8
--------------	-------------------	-------------------	-------------------	-------------------

Service Kits

▲ Service kit EPDM	9611-92-3290	9611-92-3291	9611-92-3292	9611-92-3293
▲ Service kit FPM	9611-92-3303	9611-92-3304	9611-92-3305	9611-92-3306

Service kits

Denomination	DN 65 Disc □ 10	DN 80 Disc □ 10	DN 100 Disc □ 12
--------------	--------------------	--------------------	---------------------

Service Kits

▲ Service kit EPDM	9611-92-3294	9611-92-3295	9611-92-3296
▲ Service kit FPM	9611-92-3307	9611-92-3308	9611-92-3309

Parts marked with ▲ are included in the service kit.

Recommended spare parts: Service kit.


900582

* = 3.1 certificate in accordance to EN 10204 included.

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.5 LKB Lockable Multiposition Handle for Valve

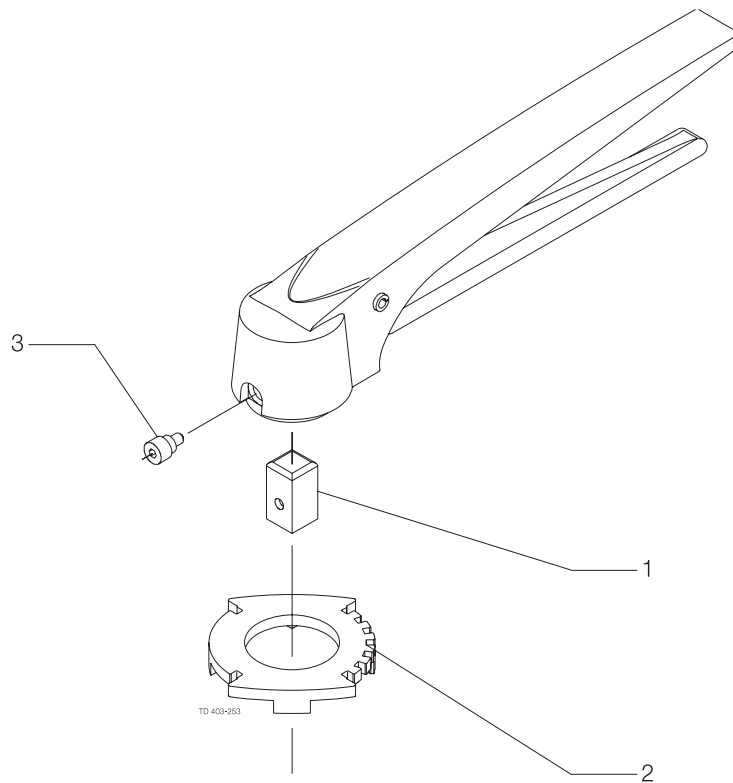

7 Parts list and Service Kits

The drawing include all parts of the valves.


Parts list

Pos.	Qty	Denomination
1	1	Insert
2	1	Positioning cap
3	1	Screw

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.6 LKB Handle 1.1 for Butterfly Valve

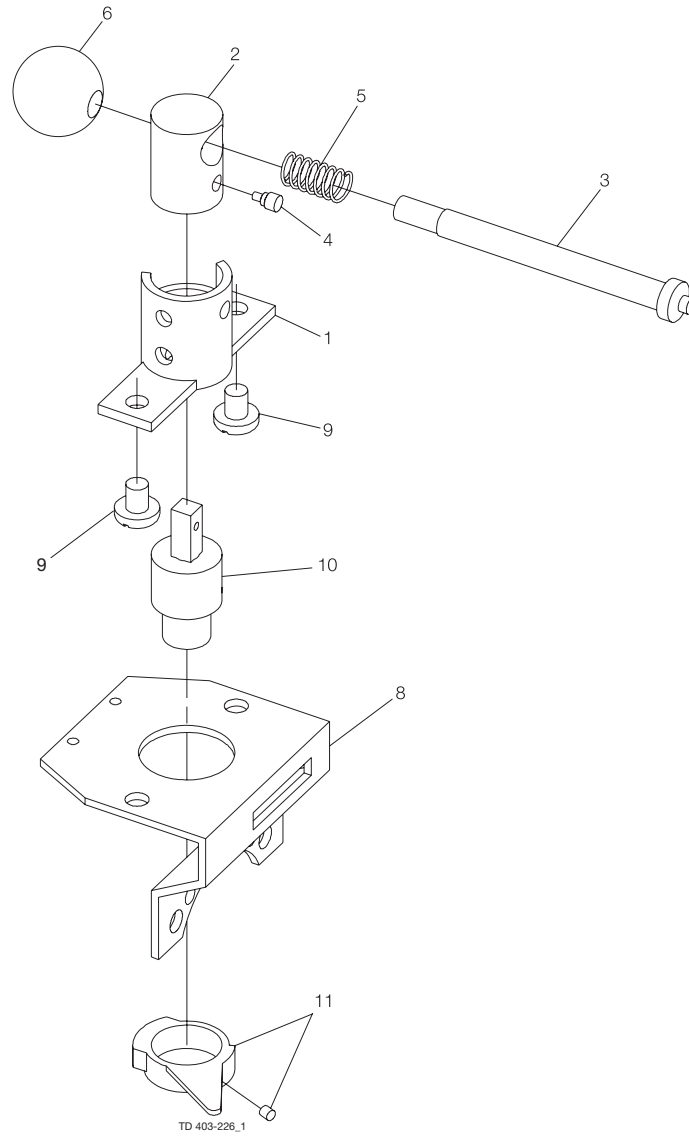

7 Parts list and Service Kits

The drawing include all parts of the valves.


Parts list

Pos.	Qty	Denomination
1	1	Location cap with 2 pos.
2	1	Transfer block
3	1	Handle
4	1	Screw with pin
5	1	Spring
6	1	Ball
8	1	Bracket
9	2	Screw
10	1	Coupling
11	1	Activating ring with screw

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.7 Handle 1.1 for Indication Unit

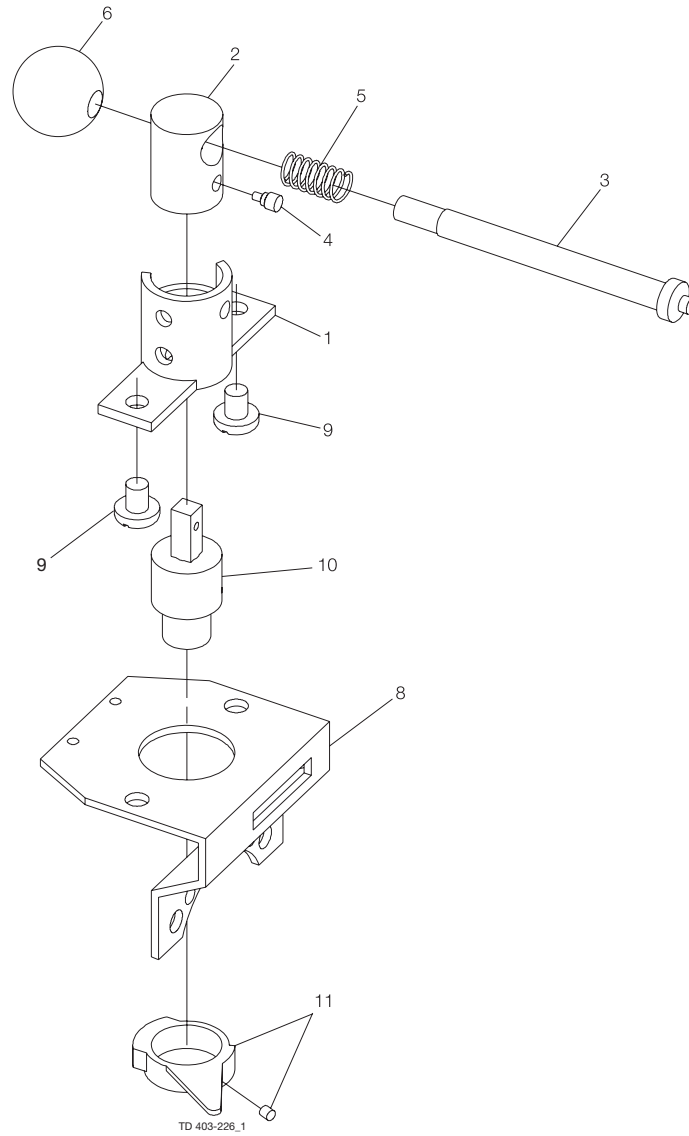

7 Parts list and Service Kits

The drawing include all parts of the valves.


Parts list

Pos.	Qty	Denomination
1	1	Location cap with 2 pos.
2	1	Transfer block
3	1	Handle
4	1	Screw with pin
5	1	Spring
6	1	Ball
8	1	Bracket
9	2	Screw
10	1	Coupling
11	1	Activating ring with screw

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.8 LKLA Actuator Air/Spring (NC-NO) ø85

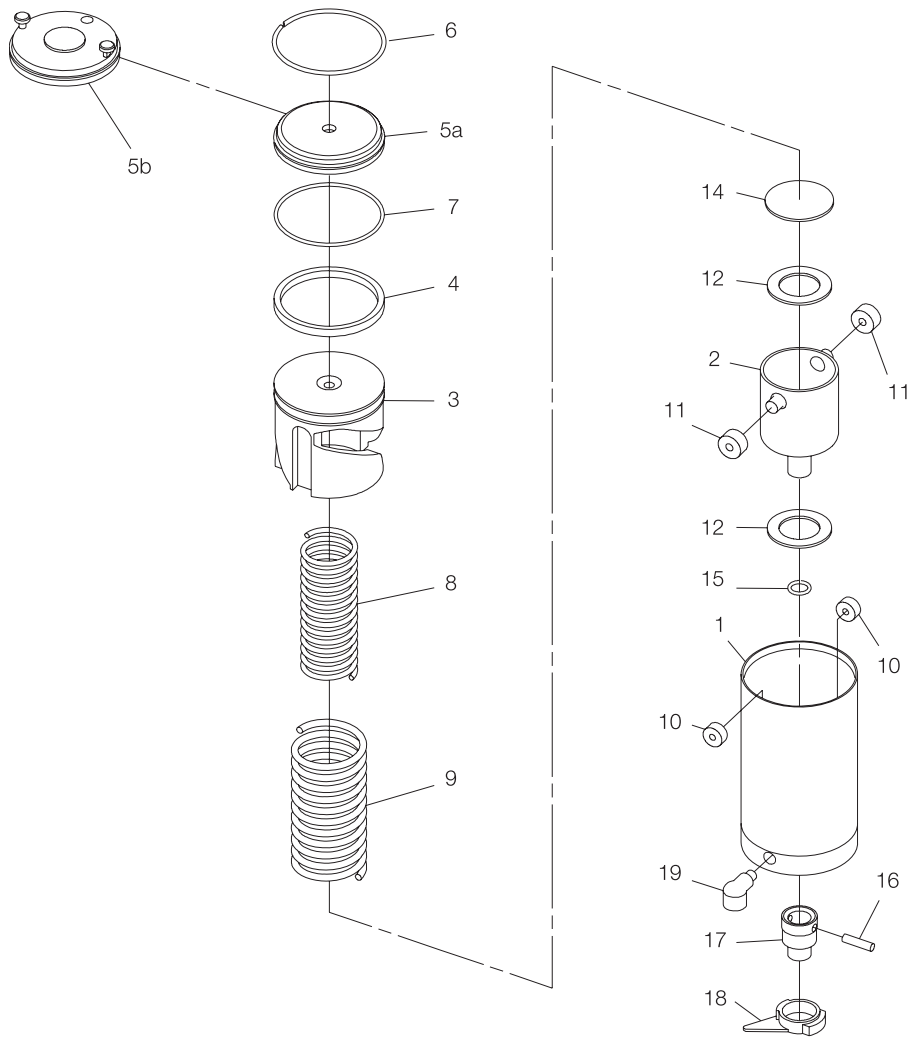

TD 407-025

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air cylinder
2	1	Rotating cylinder
3	1	Piston
4 □	1	O-ring, NBR
5a	1	End cap
5b	1	End cap, Mark III
6	1	Retaining ring
7 □	1	O-ring, NBR
8	1	Inner spring
9	1	Outer spring
10 □	2	Needle bearing
11 □	2	Needle bearing
12 □	2	Thrust bearing
14	1	Thrust plate
15 □	1	O-ring, NBR
16	1	Connex pin
17	1	Coupling
18	1	Activating ring, Noryl with screw
19	1	Water rejector (Period 8310-)

Service kits

Service Kit for Actuator

Service kits, Air/Spring 9611-92-3010

Note:

Butterfly valve 101.6 mm / DN100 sold before 8906 = □ 10 mm

Butterfly valve DN 65 (ISO) sold before 8910 = □ 8 mm

Please check the square size of the disc when ordering spares.

Parts marked with □▲ are included in the service kit.


Recommended spare parts: Service kit.

900128/2

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.9 LKLA Actuator Air/Air ø85

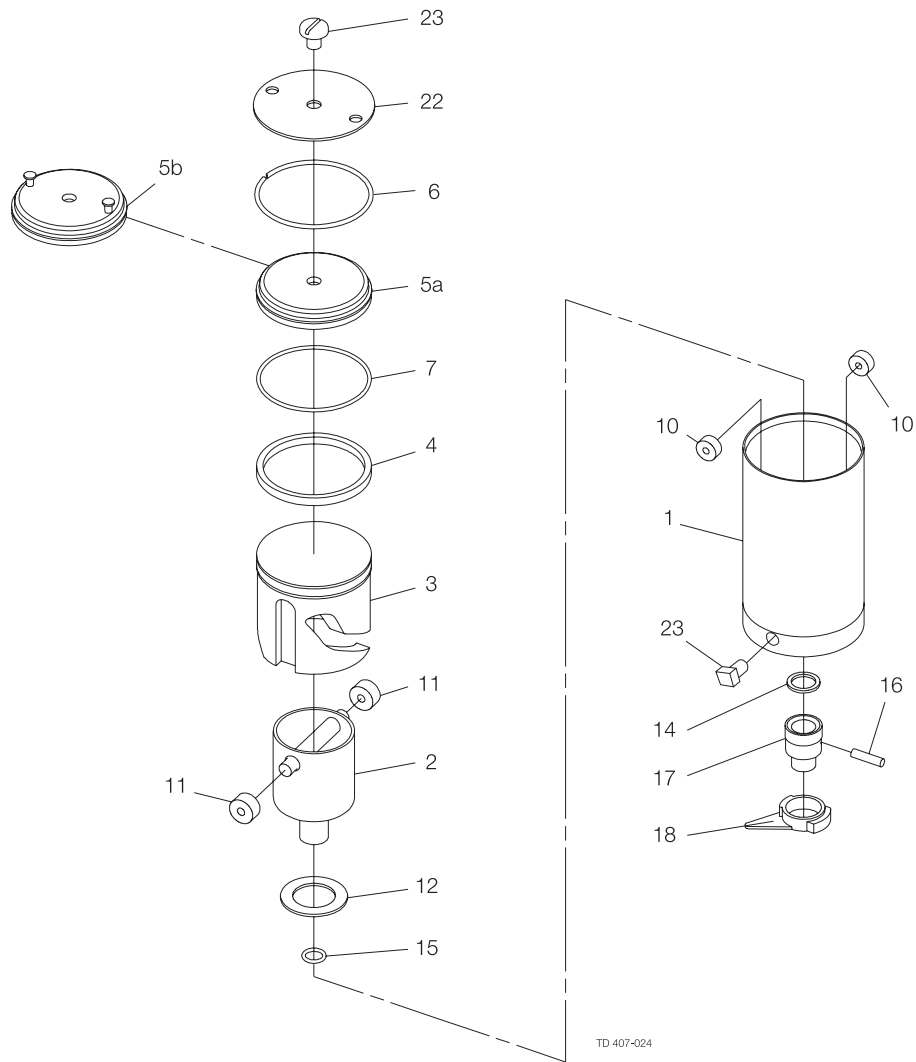

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air Cylinder
2	1	Rotating cylinder
3	1	Piston
4 □	1	O-ring, NBR
5a	1	End cap
5b	1	End cap, Mark III
6	1	Retaining ring
7 □	1	O-ring, NBR
10 □	2	Needle bearing
11 □	2	Needle bearing
12 □	1	Thrust bearing
14	1	Thrust plate
15 □	1	O-ring, NBR
16	1	Connex pin
17	1	Coupling
18	1	Activating ring with screw
22***	1	Retaining plate
23	2	Threaded plug

Service kits

Service kits, Air/Air 9611-92-3011

Note:

Butterfly valve 101.6 mm / DN100 sold before 8906 = □ 10 mm

Butterfly valve DN 65 (ISO) sold before 8910 = □ 8 mm

Please check the square size of the disc when ordering spares.

Parts marked with □▲ are included in the service kit.


Recommended spare parts: Service kit.

900129/1

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.10 LKLA Actuator Air/Spring (NC-NO) ø133

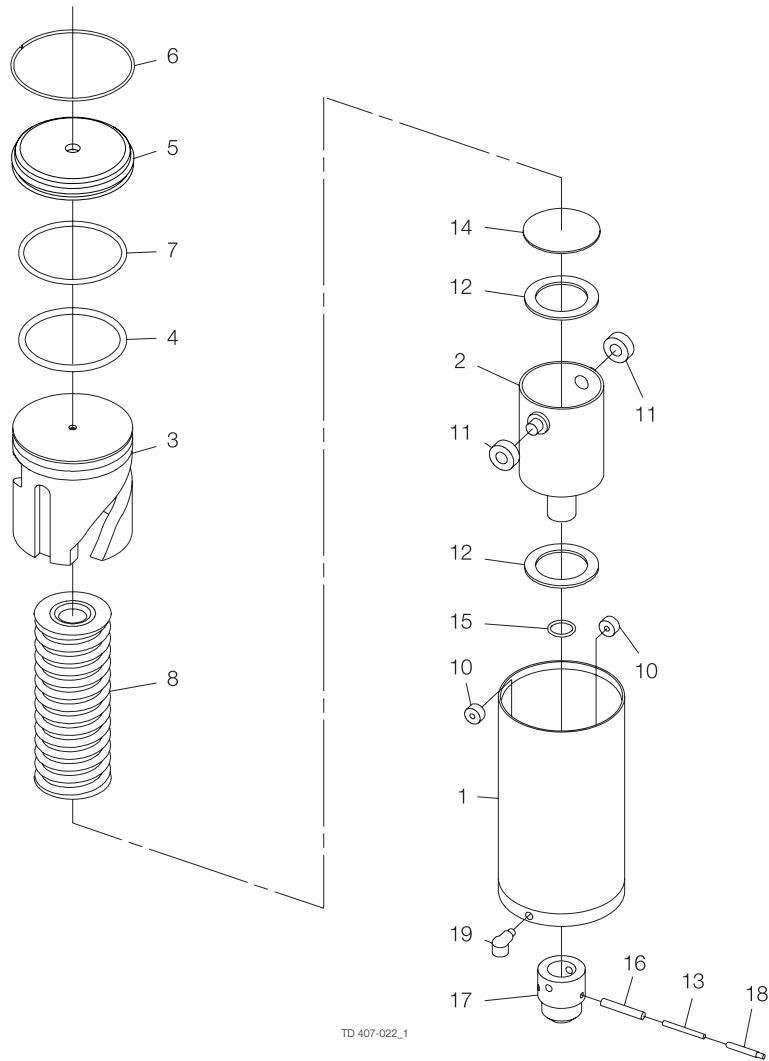

TD 407-022_1

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air cylinder
2	1	Rotating cylinder
3	1	Piston
4	1	O-ring, NBR
5	1	End cap
6	1	Retaining ring
7	1	O-ring, NBR
8	1	Spring assembly
10	2	Needle bearing
11	2	Needle bearing
12	2	Thrust bearing
13	1	Connex pin
14	1	Thrust plate
15	1	O-ring, NBR
16	1	Connex pin
17	1	Coupling
18	1	Indication pin
19	1	Water rejector

Service kits

Service Kits for Actuator

Service kits, Air/Spring 9611-92-3020

Parts marked with ▲ are included in the service kit.


Recommended spare parts: Service kit.

900131

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.11 LKLA Actuator Air/Air ø133

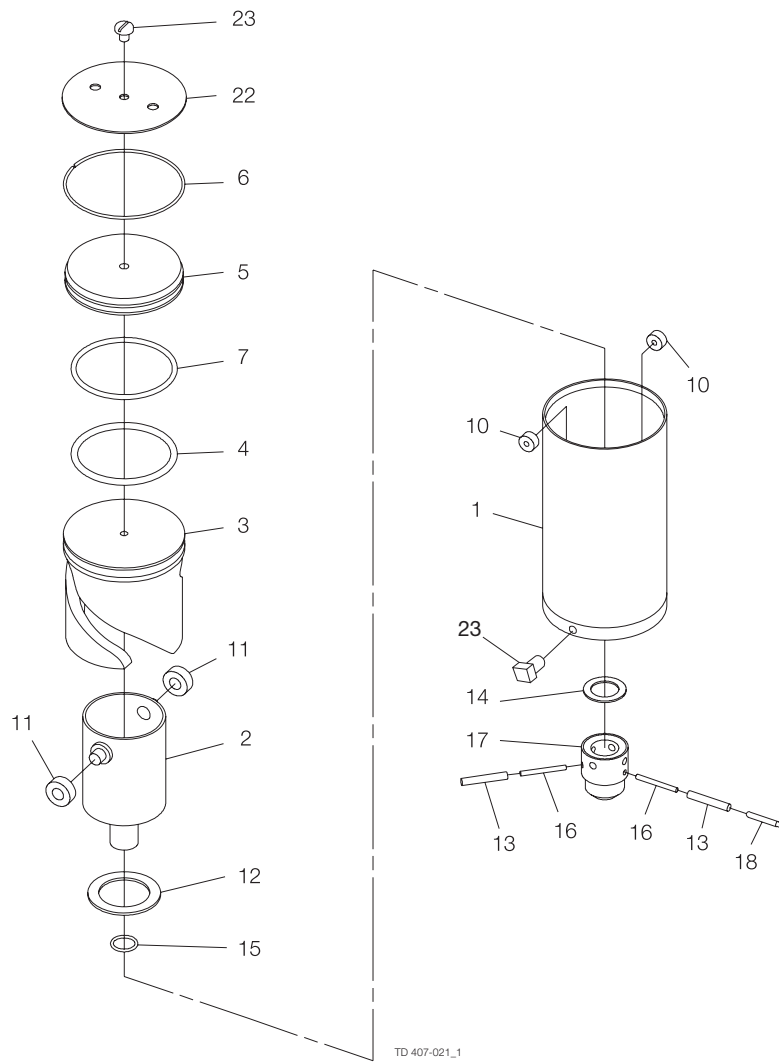

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air Cylinder
2	1	Rotating cylinder
3	1	Piston
4	1	O-ring, NBR
5	1	End cap
6	1	Retaining ring
7	1	O-ring, NBR
10	2	Needle bearing
11	2	Needle bearing
12	1	Thrust bearing
13	2	Connex pin
14	1	Thrust plate
15	1	O-ring, NBR
16	2	Connex pin
17	1	Coupling
18	1	Indication pin
22	1	Retaining plate
23	1	Threaded plug

Service kits

Denomination

Service Kits for Actuator

Service kits, Air/Air 9611-92-3022

Parts marked with ▲ are included in the service kit.


Recommended spare parts: Service kit.

900132/1

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.12 LKLA-T Actuator Air/Spring (NC-NO) ø85

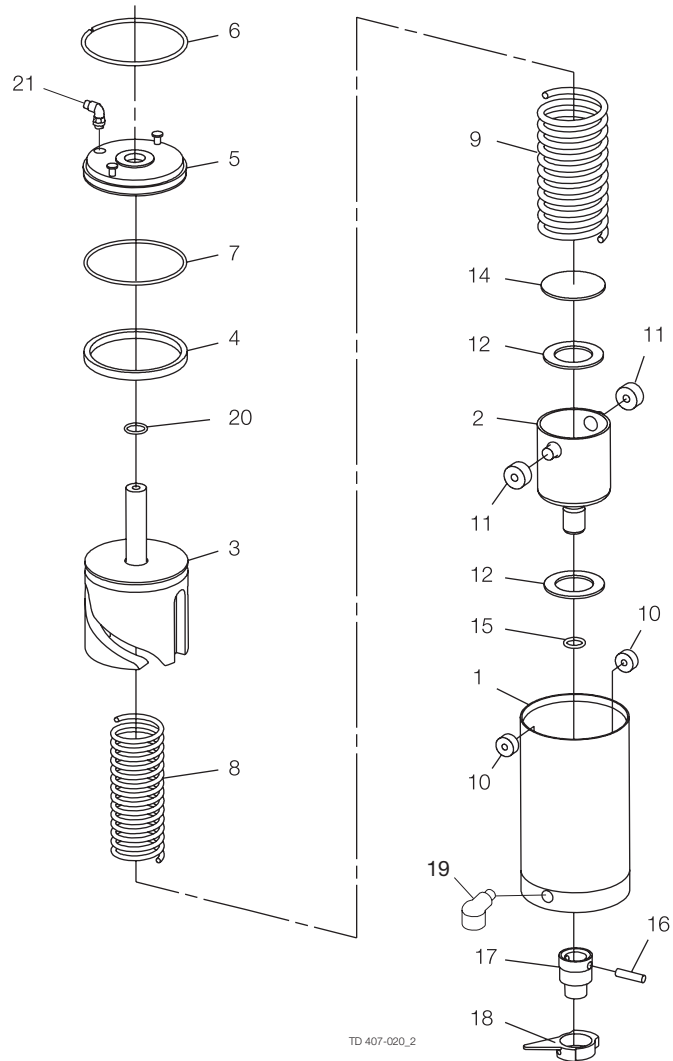

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air cylinder
2	1	Rotating cylinder
3	1	Piston
4	1	O-ring, NBR
5	1	End cap
6	1	Retaining ring
7	1	O-ring, NBR
8	1	Inner spring
9	1	Outer spring
10	2	Needle bearing
11	2	Needle bearing
12	2	Thrust bearing
14	1	Thrust plate
15	1	O-ring, NBR
16	1	Connex pin
17	1	Coupling
18	1	Activating ring with screw
19	1	Water rejector (period 8310-)
20	1	O-ring, NBR
21	1	Air fitting

Service kits

Service Kits for Actuator

Service kits, Air/Spring 9611-92-3021

Parts marked with ▲ are included in the service kit.


Recommended spare parts: Service kit.

900133/1

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.13 LKLA-T Actuator Air/Air ø85

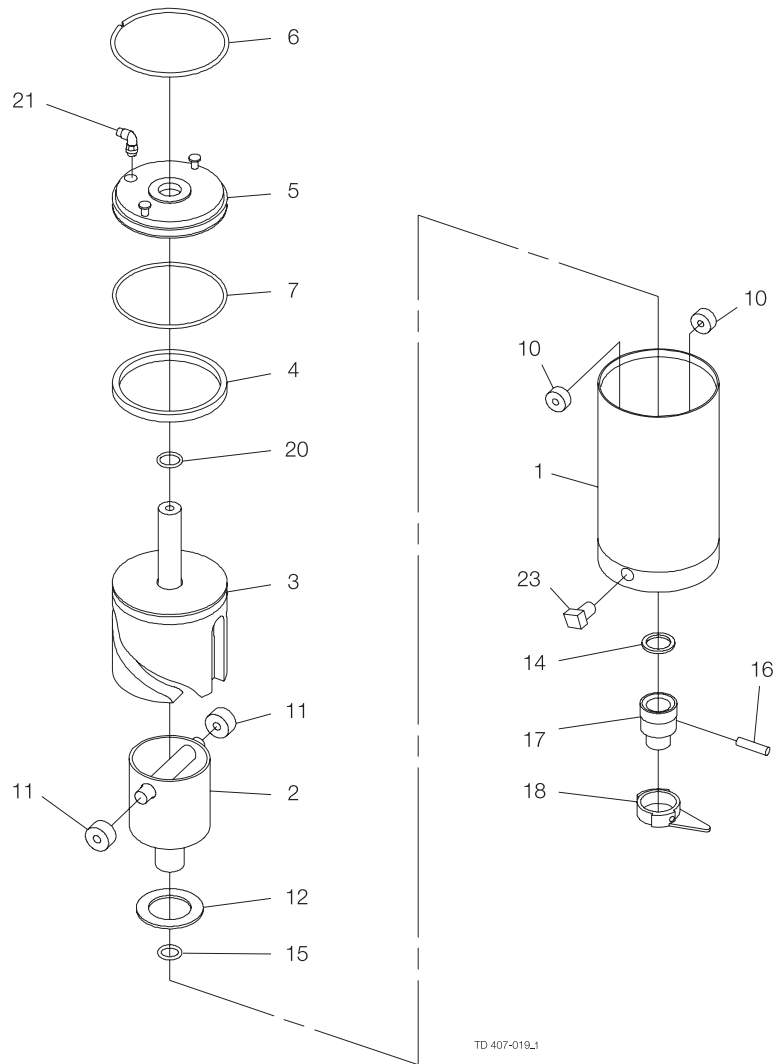

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air cylinder
2	1	Rotating cylinder
3	1	Piston
4	1	O-ring, NBR
5	1	End cap
6	1	Retaining ring
7	1	O-ring, NBR
10	2	Needle bearing
11	2	Needle bearing
12	1	Thrust bearing
14	1	Thrust plate
15	1	O-ring, NBR
16	1	Connex pin
17	1	Coupling
18	1	Activating ring with screw
20	1	O-ring, NBR
21	1	Air fitting
23	1	Threaded plug

Service kits

Service Kits for Actuator

Service kits, Air/Air 9611-92-3023

Parts marked with ▲ are included in the service kit.


Recommended spare parts: Service kit.

900134/1

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.14 LKLA-T Actuator Air/Spring (NC-NO) ø133

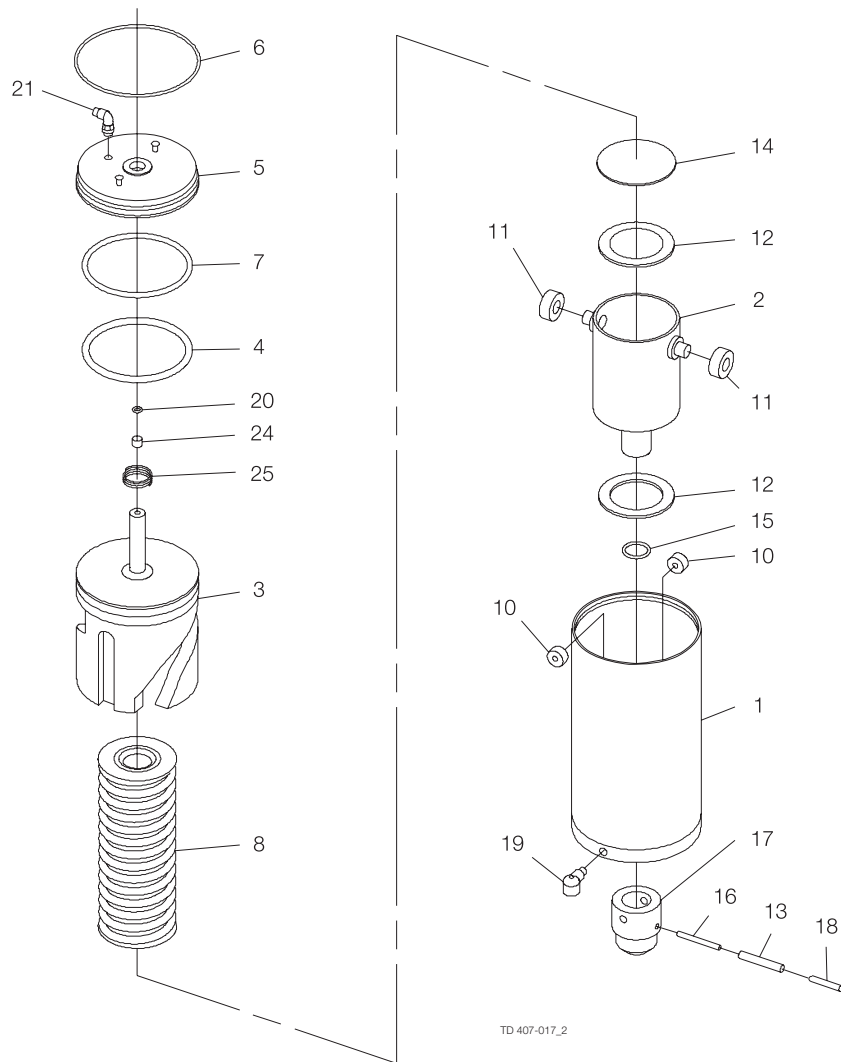

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air cylinder
2	1	Rotating cylinder
3	1	Piston
4	1	O-ring, NBR
5	1	End cap
6	1	Retaining ring
7	1	O-ring, NBR
8	1	Spring assembly
10	2	Needle bearing
11	2	Needle bearing
12	2	Thrust bearing
13	1	Connex pin
14	1	Thrust plate
15	1	O-ring, NBR
16	1	Connex pin
17	1	Coupling
18	1	Indication pin
19	1	Water rejector (period 8310-)
20	1	O-ring
21	1	Air fitting
24	1	Guiding ring
25	1	Spring

Service kits

Service Kits for Actuator

Service kits, Air/Spring 9611-92-3056

Parts marked with ▲ are included in the service kit.


Recommended spare parts: Service kit.

900136

7 Parts list and Service Kits

The drawing include all parts of the valves.

7.15 LKLA-T Actuator Air/Air ø133

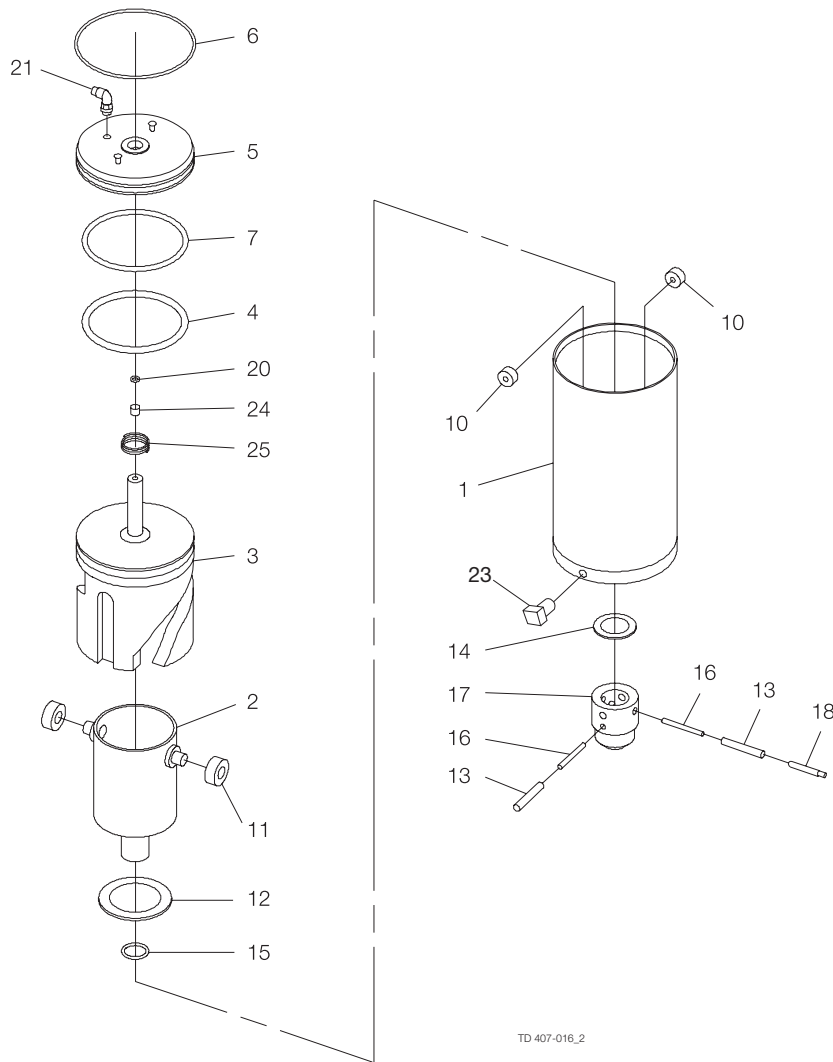

7 Parts list and Service Kits

The drawing include all parts of the valves.

Parts list

Pos.	Qty	Denomination
1	1	Air cylinder
2	1	Rotating cylinder
3	1	Piston
4	1	O-ring, NBR
5	1	End cap
6	1	Retaining ring
7	1	O-ring, NBR
10	2	Needle bearing
11	2	Needle bearing
12	1	Thrust bearing
13	2	Connex pin
14	1	Thrust plate
15	1	O-ring, NBR
16	2	Connex pin
17	1	Coupling
18	1	Indication pin
20	1	O-ring, NBR
21	1	Air fitting
23	1	Threaded plug
24	1	Guiding band
25	1	Spring

Service kits

Denomination

Service Kits for Actuator

Service kits, Air/Air 9611-92-3057

Parts marked with ▲ are included in the service kit.

Recommended spare parts: Service kit.

190137/1

How to contact Alfa Laval

Contact details for all countries are continually updated on our website.

Please visit www.alfalaval.com to access the information directly.

© Alfa Laval Corporate AB

This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.